247blinds

# TWISTE FIT DAY & NIGHT BLIND




# MEASURING FOR TWIST&FIT DAY & NIGHT BLINDS

Using a metal tape measure and a pen/pencil, follow our simple step-by-step guide.

Measure the area where your blind will be installed within the window opening, this is usually as close to the window glass as possible. Ensure you measure to the nearest mm, and we will make a 2mm deduction from your size for the best possible fit.

TIP: When measuring, be aware of anything that may get in the way. This product is not recommended for uneven or tiled walls.

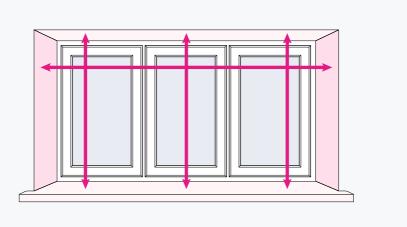

#### STEP 1 - MEASURING WIDTH

Measure the width at the top of the recess. This will be your blind width.

#### **STEP 2 - MEASURING DROP**

Take 3 measurements from the top down, along the left, middle and right of the recess. The smallest measurement will be your blind drop.

THAT'S IT! These 2 measurements are all you need for ordering this blind.

## MAKE A NOTE OF YOUR MEASUREMENTS

Blind/Colour/Location	Width	Drop

Other Notes

## 247blinds.co.uk



### All measured up?

Placing your order couldn't be easier. Scan here to be taken to our website.

or call 01484 443790







### Be inspired













247 Home Furnishings Ltd trading as 247Blinds Unit A, Trident Business Park, Huddersfield, HD2 1UA.