247blinds


# **PLANTATION SHUTTERS**



## **MEASURING FOR PLANTATION SHUTTERS**


You will need a metal tape measure, a ruler and a pen/pencil.

### **CHOOSE YOUR SHUTTER STYLE**

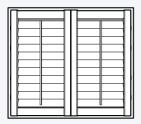

### **FULL HEIGHT**

These are designed to fit in the full height of the window. These are the most popular option for their classic look.

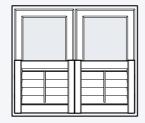

#### CAFÉ

Great for rooms where total privacy isn't required, also great for windows that have a natural sectioned top and bottom half.



#### **TIER ON TIER**

Two sets of shutters within one frame, offering total control with panels you can operate independently of one another.

All three styles are available in three slat options: 63mm, 76mm and 89mm.

### **CHOOSE YOUR FRAME TYPE**

### **L FRAME**

Allows you to position the shutters at the front of the recess, with the panels opening flat against the wall.



### **Z FRAME**

These are positioned at the front edge of the recess and jut outwards, thus creating a natural architrave style.





For both options, be aware of any obstructions, such as the windows opening inwards, window handles and window sills.

These are examples of commonly seen side profiles, for specific frame appearance and measurements, please refer to the more information tooltips, in your chosen product page.


Alternatively, give us a quick call on 01484 443790

L FRAME Z FRAME

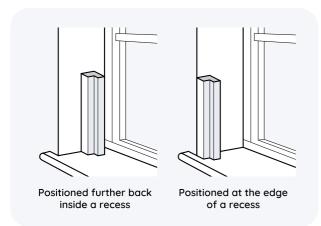

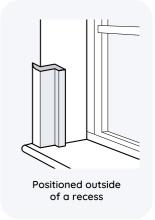

## STEP 1 - MEASURING FOR YOUR SHUTTER

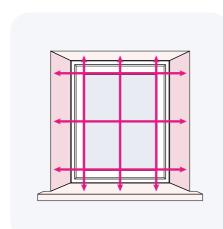

### **MEASURING WIDTH**

Take 3 measurements across the width of the top, middle and bottom of the recess. The smallest measurement will be your blind width. (We will make your blind 3mm narrower for a snug fit.)


#### MEASURING DROP


Take 3 measurements from the top down, along the left, middle and right of the recess. The smallest measurement will be your blind drop. (We will make your blind 3mm shorter for a snug fit.)

## CHECKING THE SQUARENESS OF THE WINDOW

Measure diagonally across the recess in both directions.

NOTE: If the recess is more than 15mm out of square, using the Z frame may be more suitable, and will require less remedial work.

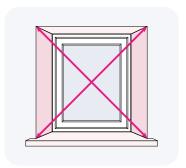


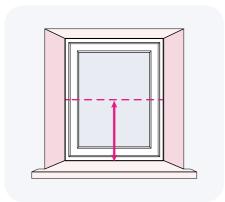

### **MEASURING FOR MID-RAILS**

For shutters over 1700mm, a mid-rail will be incorporated which adds rigidity to the panels. This will be placed usually half way.

Please state the position of the mid-rail by measuring from the bottom of where the shutter frame will be fixed up to the centre of where you want the mid-rail to be. This will usually be where there is a transom on the window.



### **EXTRA STEP**


## For measuring further back inside a recess

For inside recess measurements, please make note of these slat and frame clearance depths:

Shutter Frame | 49.8mm

63mm slats do not protrude out of the back of the frame. 89mm slats protrude out the back by an extra 15mm.

Please allow for no interference in slat operation.




### TIER ON TIER STYLE

For Tier on Tier shutters measure as standard full height shutter but ascertain the height of the tiers by measuring up from where the bottom of the frame will be fixed to where you require the split of the tiers.

NOTE: There is a permanent T bar on Tier on Tier Shutters, to separate the tiers.

## **CAFÉ STYLE**

For Café Style, to ascertain the finished height to the top of the panel, again measure up from the bottom where the frame will be fixed to where you want the panel to finish.

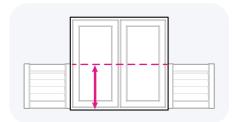

## **OTHER SIZES**

As our shutters come from different sources and locations in and outside the UK, the sizes will vary to allow for transit and factory limits.

Shutter Sizes (cm)	Bromley Snow & True White	Bromley	Kensington
Min Width	26.6	28.8	24.9
Max Width	246.3	246.3	269.6
Min Drop	46.6	46.6	29.9
Max Drop	250.6	300	300
Panel Sizes (cm)	Min Max	Min Max	Min Max
1 Panel (L)	26.6 85.6	26.6 85.6	24.9 93.9
1 Panel (R)	26.6 85.6	26.6 85.6	24.9 93.9
<b>Panels</b> - 1 (L) 1 (R)	47.9 165.8	52.3 188.6	45.2 183.1
2 Panels (L)	47.9 125.8	52.3 125.8	45.2 137.1
2 Panels (R)	47.9 125.8	52.3 125.8	45.2 137.1
<b>3 Panels</b> - 1 (L) 2 (R)	69.1 186.1	75.7 186.1	65.4 203.4
<b>3 Panels</b> - 2 (L) 1 (R)	69.1 186.1	75.7 186.1	65.4 203.4
<b>4 Panels</b> - 2 (L) 2 (R)	90.4 246.3	99.2 246.3	85.7 269.6

## MAKE A NOTE OF YOUR MEASUREMENTS

Blind/Colour/Location	Width	Drop

Other Notes

## 247blinds.co.uk



## All measured up?

Placing your order couldn't be easier. Scan here to be taken to our website.

or call 01484 443790







### Be inspired













247 Home Furnishings Ltd trading as 247Blinds Unit A, Trident Business Park, Huddersfield, HD2 1UA.